




## Tensioning Tool (Standard) Manual

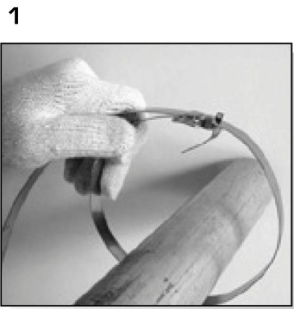


Insert the band into the buckle. The buckle teeth shall be in the direction of the operator with the ears faced up. Bend end of band under buckle.

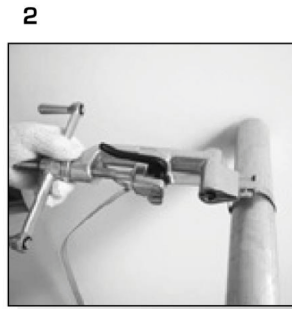


Place band in opening of tool nose and gripper Block. Push the "tool nose" against the buckle.

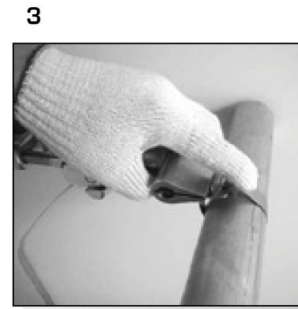

Place your finger between the buckle ears. Tighten band clamp by turning the tension handle clockwise.

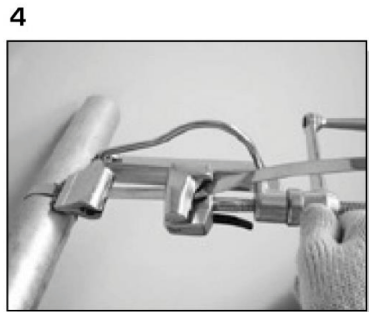

When reaching the desired tension, turn the tool over the buckle. This movement will increase the band tension.

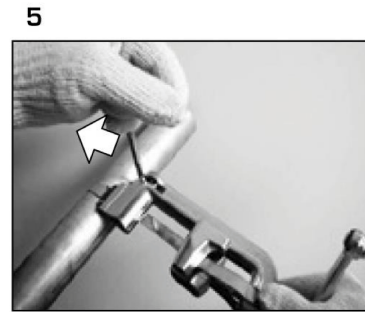

Rotate cutting handle forward to cut the band.



Remove tool, holding stub of band down.



Hammer down buckle ears to complete the application.